

# DVR Instructions

*Guide and menu instructions are the same as the Set Top Box*

## **To record a program**

Open the guide by selecting the Guide button  
Navigate to the program you want to record  
Click OK  
Select Set Recording  
A red dot will appear to the left of the program on the guide

## **OR**

Open the guide by selecting the Guide button  
Navigate to the program you want to record  
Select the red button on the remote that has a white R in it with a white circle around it  
A red dot will appear to the left of the program on the guide

\*At this time you cannot record more than one program during the same time.

## **To schedule a recording of a program on a daily/weekly basis**

Select Menu  
Select Schedule Event  
Follow the on screen instructions  
Click OK  
A double red dot will appear to the left of the program on the guide

## **To access your recorded programs**

Select Menu  
Select PVR  
Select Recordings  
Select Program  
Click OK  
Select Play Recording

## **To view your scheduled recordings that have not been recorded yet**

Select Menu  
Select PVR  
Select To Record

### **To cancel a recording that hasn't been recorded yet**

- Select Menu
- Select PVR
- Select To Record
- Navigate to the program you want to cancel
- Click OK
- Select Cancel Recording

### **To delete a program that has already been recorded**

- Select Menu
- Select PVR
- Select Recordings
- Navigate to program that you want to delete
- Click OK
- Select Delete Recording
- Select Yes

### **Pause a live program**

Use the Pause to freeze the program that you are watching. Programs will remain in pause for up to 2 hours. Press Play to resume watching at normal speed.

### **Rewind or fast forward a live program**

Press rewind or fast forward up to four times to increase the speed. You can only fast forward up to the point of the live TV program. You can't fast forward ahead of the live program. Press play to resume watching at normal speed.

### **Conflict Management**

Any time you schedule a program that conflicts with another program you will receive a warning that your new selection conflicts with a previously scheduled program.

### **Storage Information**

The total number of recording hours will depend on the mix of SD (standard definition) or HD (high definition) programs you have recorded. On average you can store up to 18 hours of HD programming and up to 88 hours of SD programming.